Manualslib.com - The Global Manuals Library

Manuals / Brands / Sharp Manuals / TV / 21H-FT1 / Operation manual / PDF

SHARP 21H-FT1 OPERATION MANUAL

Table of Contents

Table of Contents
Accessories
Easy setup
Safety precautions
Part names
Installing batteries in the remote control unit
tv front
tv set
Watching a TV programme
Operating the TV buttons

Channel/Timer display
Mute
Channel recall
TV/Video selection
Selecting a menu item
On-screen display language selection
Auto channel tuning
Manual channel tuning
Channel setting
Picture adjustment
Sound adjustment
Surround sound
Channel Scan
System
Blue screen
Favourite Channels
Off timer
On timer
Reminder on-screen timer
Connecting to a DVD player
Watching DVD Playback
Connecting to an antenna
Connecting to an antenna via a VCR
Connecting to video equipment
Troubleshooting
Specifications
Other ManualsLib Projects

SHARP

تلفزيون ملون

21H-FT1

■ دليل التشغيل ■

يرجى قراءة دليل التشغيل هذا بعناية قبل استعمال التلفزيون الملون.

SHARP

COLOUR TELEVISION
彩 色 电 视 机
TÉLÉVISEUR COULEUR
TELEVISYEN WARNA

21H-FT1

■ **OPERATION MANUAL** ■
■ 使 用 说 明 书 ■
■ **MODE D'EMPLOI** ■
■ **BUKU PANDUAN OPERASI** ■

Please read this operation manual carefully before using the colour television.

在使用本彩色电视机之前，请先阅读本使用说明书。

Veuillez lire attentivement ce mode d'emploi avant d'utiliser ce téléviseur couleur.

Sila baca dengan teliti buku panduan operasi ini sebelum menggunakan TV warna.

TINS-B817WJZZ

ENGLISH
中文
FRANÇAIS
BAHASA MELAYU

Contents

Preparation

Accessories 2
Easy setup 3
Safety precautions 4
Part names 6
Installing batteries in the remote control unit 6

Watching TV

Watching a TV programme 8
Operating the TV buttons 9

Useful features

Channel/Timer display 10
Mute 10
Channel recall 11
TV/Video selection 11

Selecting menu items

Selecting a menu item 12

Settings and adjustments

On-screen display language selection 13
Auto channel tuning 14
Manual channel tuning 15
Channel setting 16
Picture adjustment 17
Sound adjustment 18
Surround sound 19
Channel Scan 19
System 20
Blue screen 21
Favourite Channels 22
Off timer 23
On timer 24
Reminder on-screen timer 25

Connections

Connecting to a DVD player 26
Watching DVD Playback 26
Connecting to an antenna 27
Connecting to an antenna via a VCR 27
Connecting to video equipment 28

Troubleshooting

Troubleshooting 29

Specifications

Specifications 30

Dear SHARP Customer

Thank you for buying SHARP's Colour Television. We hope you will have many years of enjoyment from this television set. To ensure proper operation, please read this manual carefully, and keep it in a safe place for future reference.

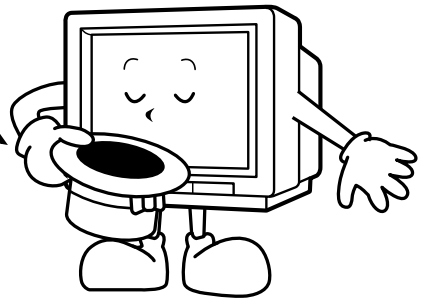

Accessories

The following accessories are included with this television.

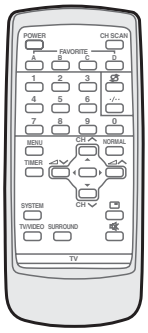

Remote control

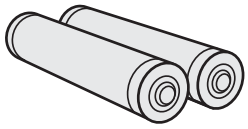

Size-AA batteries

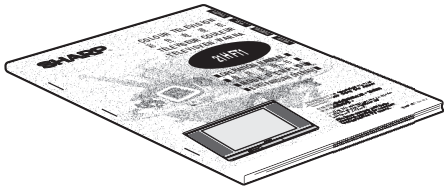

Operation manual

Easy setup

To use your TV set, perform the easy setup procedure below.
The mark indicates the page numbers with more detailed information.

1

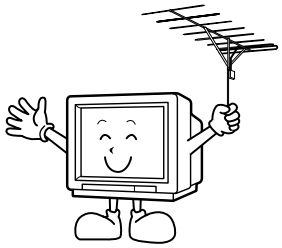

Connect the antenna.

- See 27 to connect the antenna.

2

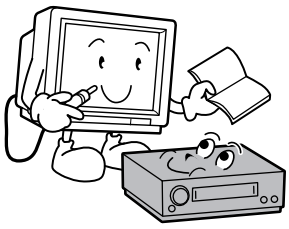

Connect any video equipment.

- See 27, 28 to connect video equipment.
- See the operation manual of your video equipment when connecting to the TV set.

3

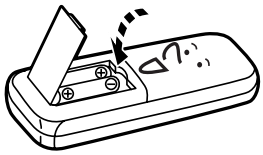

Insert the batteries into the remote control.

- Use the two batteries included with the TV.
- See 6.

4

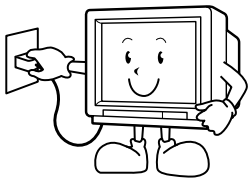

Insert the AC plug to the power outlet.

- If you will not use the TV set for a considerable length of time, as a safety precaution, unplug the cord from the outlet.

5

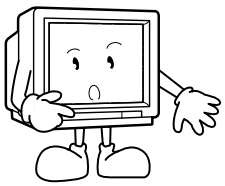

Tune the channels.

- Use the buttons on the TV.
- See 14, 15.

Safety precautions

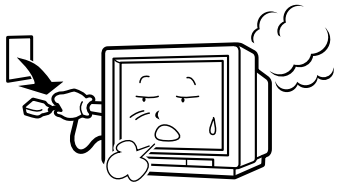

Damage

Turn off the power and unplug the power cord from the wall outlet immediately if the TV set begins to make any unusual noises or gives off smoke or an unusual smell. Then call your dealer for service.

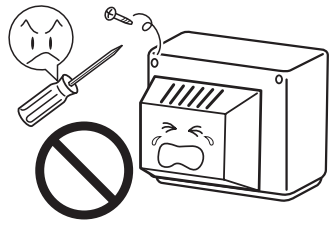

Servicing

To reduce the risk of electric shock, do not remove the back of the cabinet. This TV set contains dangerous voltage.

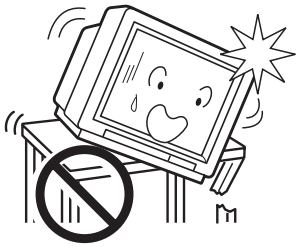

Unstable surface and shocks

Do not place this TV set on an unstable cart, stand, shelf, or table. The TV set may fall, causing serious injury to a child or adult, and serious damage to the set.
Sharp recommends securing the TV set to a stable surface or wall to prevent the set from falling due to sudden shocks or impact.

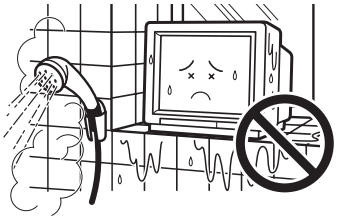

Water

To prevent fire or electrical shock, do not place the TV set near a bathroom, swimming pool or other area where it may become wet.

Moisture

To prevent electrical shock, do not use the TV set in an excessively damp place.

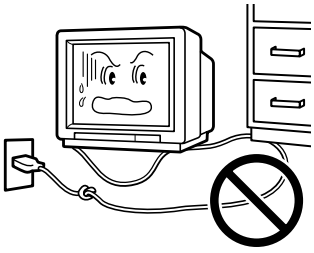

Power-cord protection

To prevent electrical shock, do not subject the AC power cord to damage by bending or twisting it, or by placing heavy items on top of it and do not place the AC power cord under the TV set. If the AC power cord becomes damaged, unplug it from the wall outlet immediately and call your dealer for service.

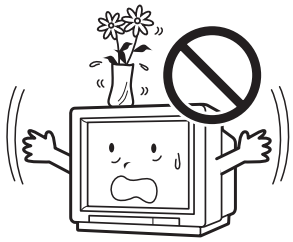

Liquid entry

Do not place a flower vase or anything else containing liquid on the TV set, as liquid spilt on the TV set can cause electrical shock or failure.

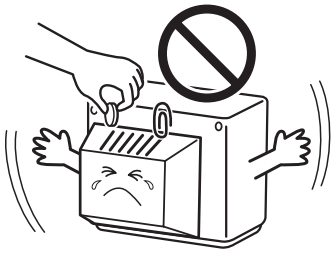

Object entry

Never insert or drop any metallic or inflammable objects into the ventilation openings of the TV set, as this can cause fire, electrical shock, or electrical failure.

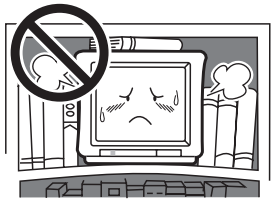

Ventilation

Do do not place this TV set in a confined area, such as on a bookshelf or in a built-in case. Leave adequate space behind the TV for proper ventilation.

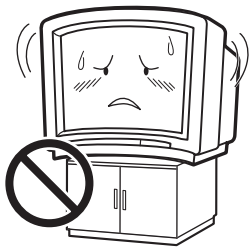

TV Set position

Do place the TV set onto an even stand, table or track which size is bigger than the TV set.
If the TV set is put onto a smaller size or uneven stand, table or track may cause the TV cabinet distort.
Do not put or insert anything between TV set and the stand, table or track.

Uneven surface and excessive force

Television equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

Fire prevention

To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

Part names

The mark indicates the page numbers with more detailed information.

Remote control

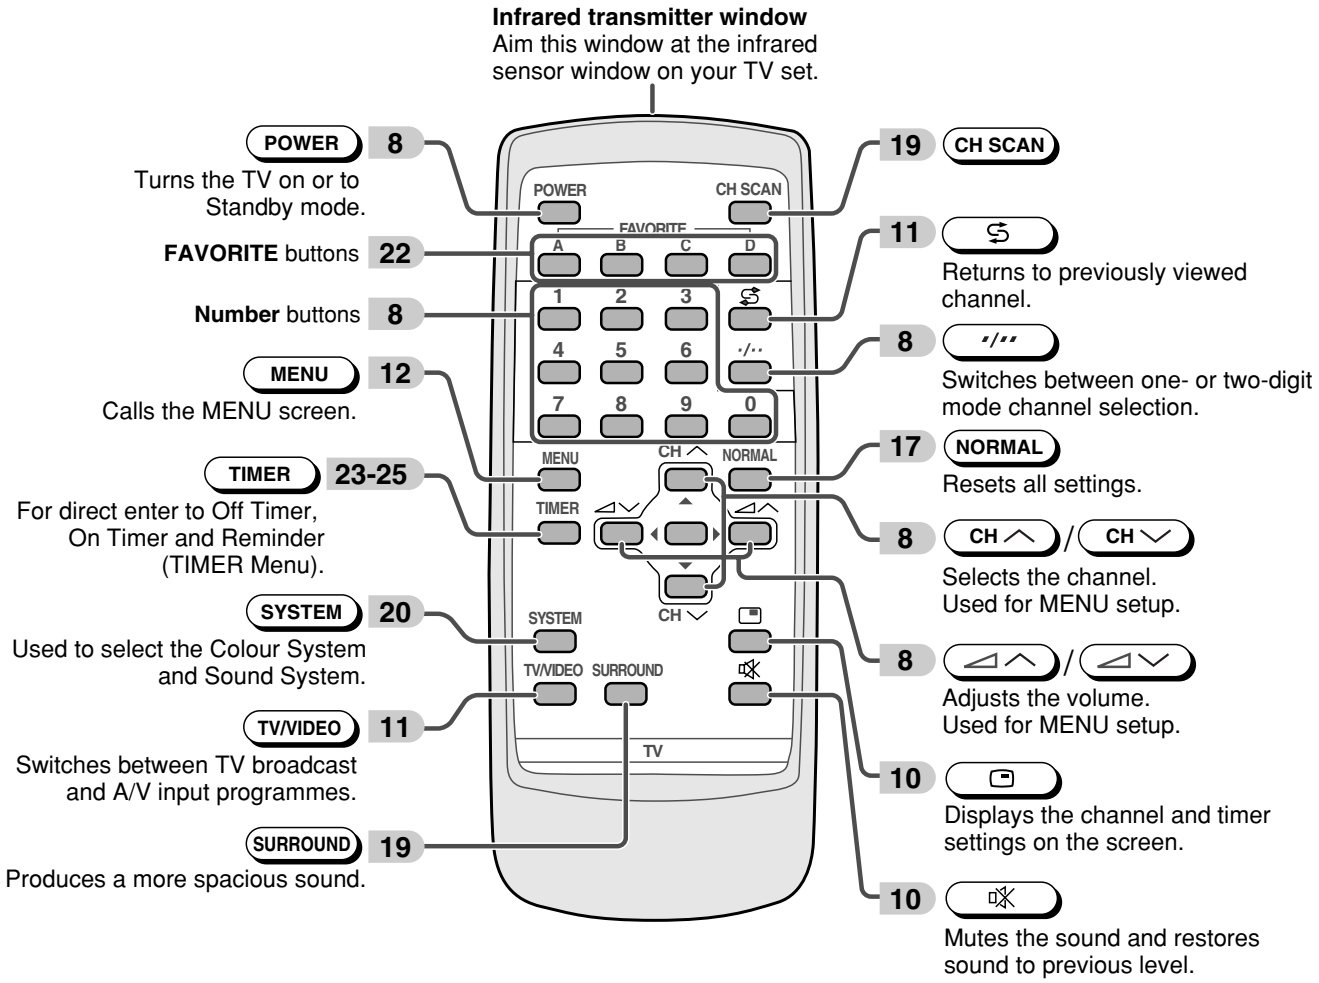

Installing batteries in the remote control unit

1 With your thumbnail, pull up at the slit to open the battery cover.

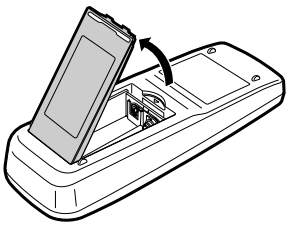

2 Insert two batteries (size AA).

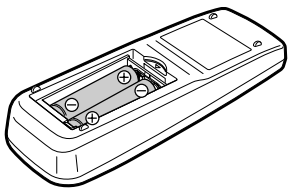

3 Replace the battery cover.

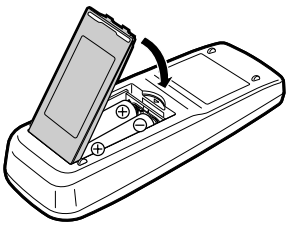

NOTE

- Be sure to match the battery ⊕/⊖ terminals with the ⊕/⊖ marks inside the compartment.
- Remove the batteries if weak or if the unit is not in use for long periods.
- Do not mix old and new batteries.
- Incorrect installation of the batteries may damage the remote control.

TV set

TV front

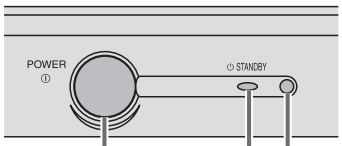

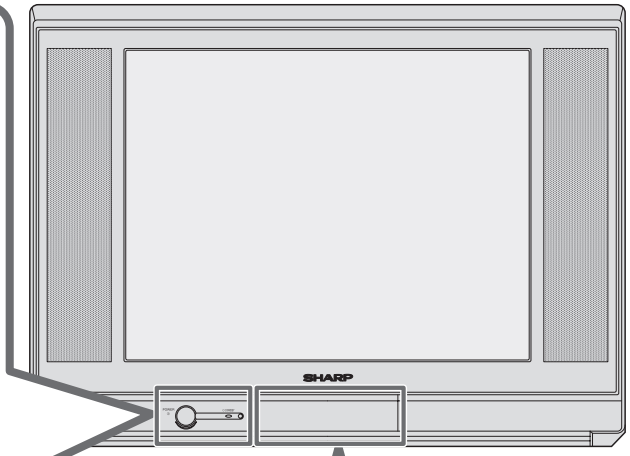

⏻ POWER 8

⏻ POWER switch
Turns on and off the main power.

⏻ STANDBY indicator 8
Power can be turned on by the remote control when the indicator is dimly.

Infrared sensor window 6
Receives the infrared wave from the remote control.

Behind the door

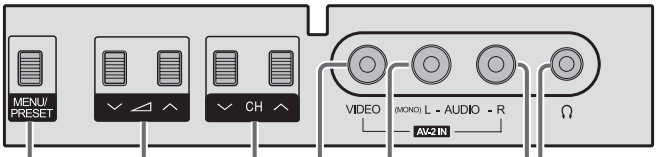

MENU/PRESET 12

MENU/PRESET button
Tunes the channels.
Used for MENU setup.

◿^ / ◿v 8

Volume up/down buttons
Adjusts the volume.
Makes adjustments in PRESET.

CH ^ / CH v 8

Channel up/down buttons
Selects the channels.
Tunes or sets the channels.

9 **Headphone jack**
Use to listen to the audio with headphone.

28 **Audio input terminals (AV-2)**
Connects to a camcorder, video game, etc.

28 **Video input terminal (AV-2)**
Connects to a camcorder, video game, etc.

NOTE • When using headphone, see 9 .

Watching TV

ENGLISH

Watching a TV programme

Simple operations for watching a TV programme

TV Set

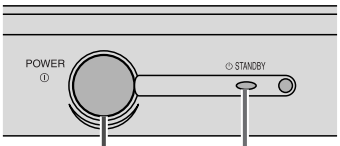

ⓘ POWER ⏻STANDBY indicator

Behind the door

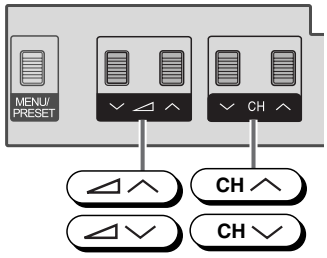

CH ∧
CH ∨

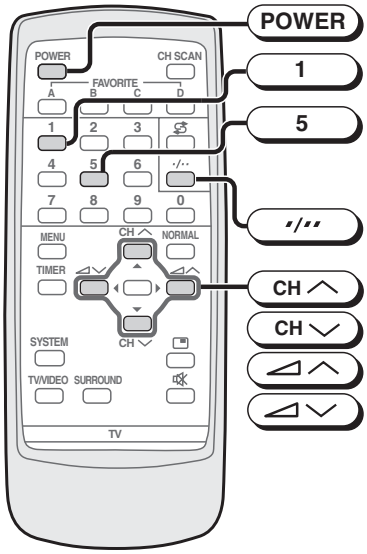

POWER
1
5
·/··
CH ∧
CH ∨

1 **Turn on power.**

- When the ⏻ Standby indicator is off, press ⓘPOWER.
- When the ⏻ Standby indicator lights up dimly, press POWER on the remote control. The ⏻ Standby indicator changes to bright and a picture appears.

2 **Select channel.**

With CH ∧ / CH ∨

- Press CH ∧ and channels change as shown below.
  1 → 2 → ... → 98 → 99 → AV1 (or COMPONENT) → AV2 → 0 → 1 → 2 ...
- Press CH ∨ and channels change as shown below.
  1 → 0 → AV2 → A (or COMPONENT) → 99 → 98 → ... → 2 → 1 → 0 ...

With the number buttons (on remote control)

- To select a one-digit channel, such as 5, press 5.
  If "5-" is indicated, press ·/·· to select one-digit input, and then press 5 again.
- To select a two-digit channel, such as 15, press ·/·· to select the two-digit input. Press 1, and then press 5.

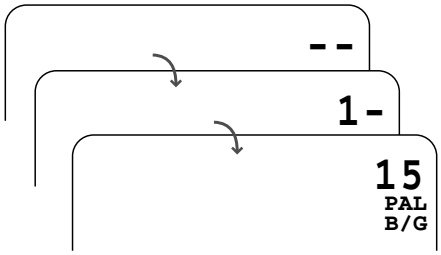

3 **Adjust volume using ◿ ∧ / ◿ ∨.**

- The number of oval blocks "▮" indicates the volume level. The volume bar disappears approximately three seconds after the volume has been adjusted.

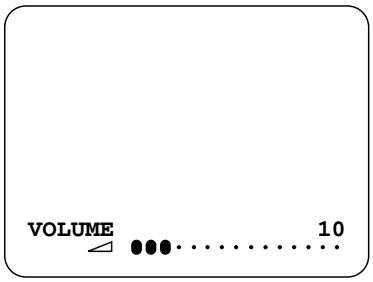

NOTE

- When the ⏻ Standby indicator lights up dimly, either CH ∧ / CH ∨ on the TV can be pressed to turn on the power.
- The channel number is displayed in green for channels tuned by auto tuning and displayed in yellow for channels tuned using fine tuning.
- When the ⏻ Standby indicator lights up dimly, the TV is in Standby mode and power is still supplied to the TV. If you will not watch TV for a while, turn off the main power by pressing ⓘPOWER on the TV set. Also, if you will not be at home for a considerable length of time, unplug the cord from the outlet.
- The AV1 (or COMPONENT), AV2 input channels cannot be selected using CH ∧ / CH ∨ on the remote control. Use TV/VIDEO to select these channel.
- Channels that have been skipped cannot be selected. See 16.
- The on-screen displays in this manual may differ from their actual appearance.

Operating the TV buttons

Simple operation of the TV set

Behind the door

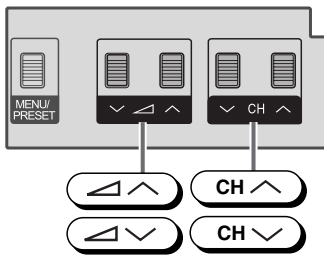

Using ◿^ / ◿v

Press ◿^ to increase volume.

Press ◿v to decrease volume.

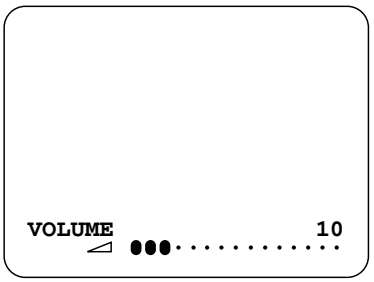

Using CH^ / CHv

Press CH^ to increase channel number.

Press CHv to decrease channel number.

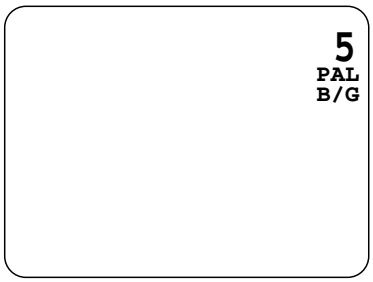

Behind the door

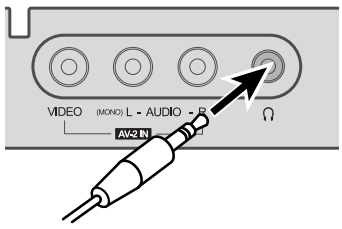

Using headphone

Insert headphone plug into headphone jack to listen to audio with headphone.

• The audio from the speakers is turned off.

NOTE

- Select an appropriate volume so as not to injure your hearing.
- To avoid injuring your hearing, do not put on the headphone before plugging them into the headphone jack and before the power is turned on.
- The proper impedance for the headphone is 32 ohms.
- Remove the headphone plug from the jack when not using the headphone.

Useful features

Channel/Timer display

Displays the current channel number, the timer, and other settings on the screen.

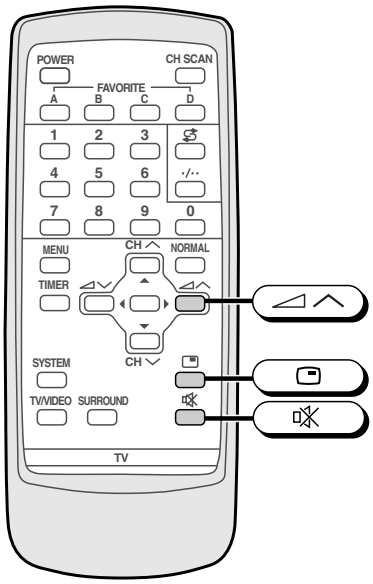

1 **Press** ( ).

- The time remaining on the Off timer, On timer, and Reminder appears on the screen.
- When no timer is set, the channel number, colour and sound system appear on the screen. Press ( ) again to clear these current settings display on the screen.

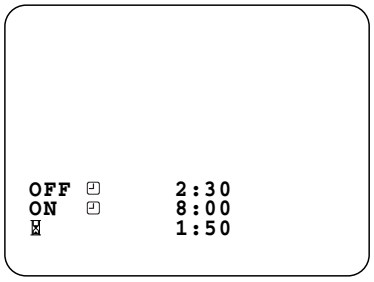

2 **Press** ( ) **again.**

- The channel number, colour and sound system appear on the screen.

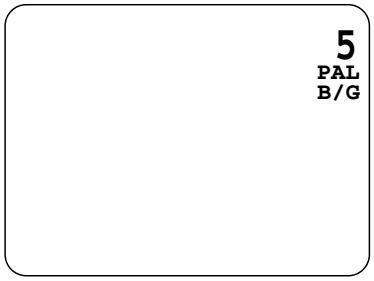

3 **Press** ( ) **once again.**

- The display disappears.

Mute

Silences the sound.

1 **Press** ( ).

- "🔇" appears on the screen, and the sound is silenced.

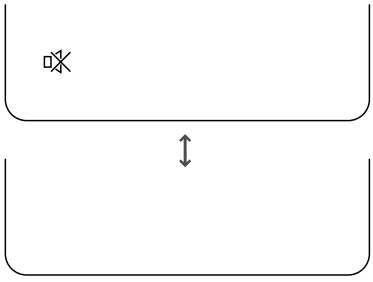

2 **Press** ( ) **again.**

- The volume returns to its previous level.

NOTE • Mute will be cancelled if the ( ) is pressed at any time.

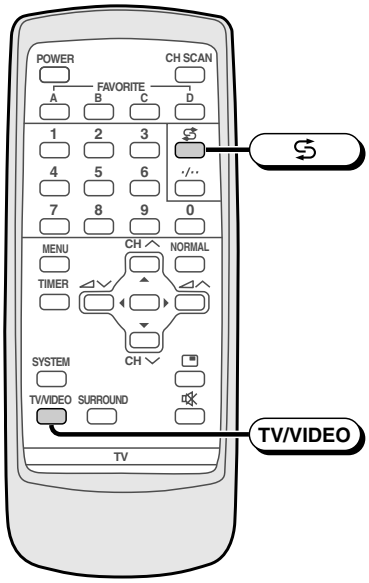

Channel recall

Switches back to the channel you were watching just before the current channel.

Press ⇆.

- The channel previously viewed returns to the screen.

Example:

After switching from channel 5 to channel 7, ⇆ is pressed, the channel will change to channel 5. Press ⇆ again to return to channel 7.

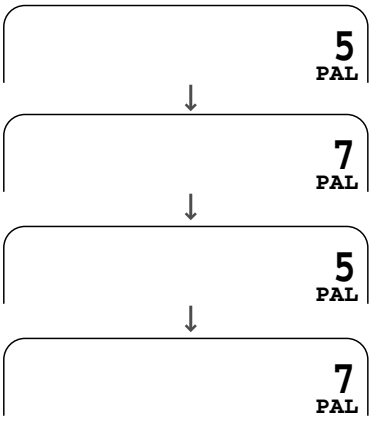

TV/Video selection

Switches between TV broadcasts and AV input programmes.

Each time you press the TV/VIDEO, the input switches between AV1 (or COMPONENT), AV2 and TV programme.

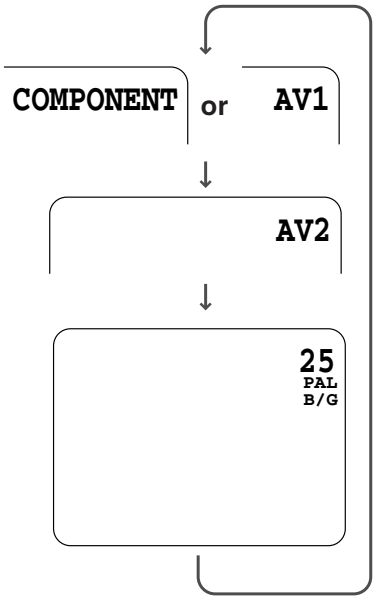

Selecting menu items

This TV set allows you to adjust the picture and sound, and set the channels and other features using the On-screen display with the remote control or from the TV set. Select the desired menu item by following the steps below and then refer to the indicated page for details.

Remote control

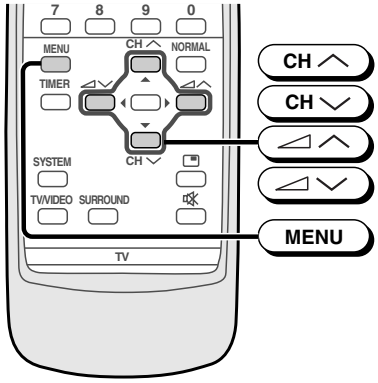

Behind the door

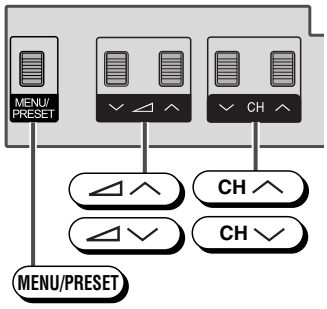

Selecting a menu item

1 **Press MENU / MENU/PRESET to call MENU screen.**

```
MENU

◆PICTURE
  SOUND
  FEATURE
  TIMER
  CH-SETTING
```

2 **Press CH ^ / CH v to select desired menu item.**

- The selected item is highlighted in yellow.

```
MENU

  PICTURE
◆SOUND
  FEATURE
  TIMER
  CH-SETTING
```

3 **Press ◿^ / ◿v to enter.**

- The corresponding menu screen will appear.

```
SOUND

◆SURROUND          OFF
  TREBLE             0
  BASS               0
  BALANCE            0
```

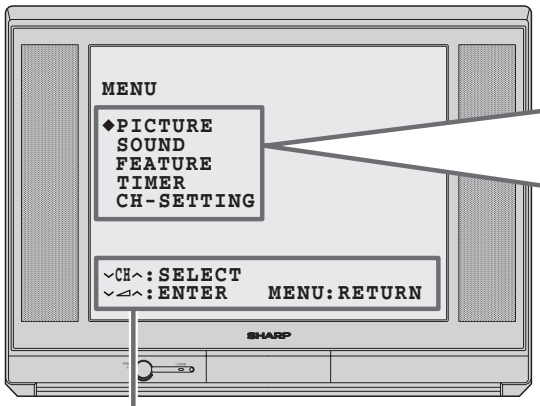

Operating guide

PICTURE menu ····· 17

```
PICTURE

◆CONTRAST          60
 COLOUR             0
 BRIGHTNESS         0
 TINT
 SHARPNESS          0
 WHITE TEMP      ◆──●──◇

CH^:SELECT
◿^:ADJUST  MENU:RETURN
```

SOUND menu ····· 18

```
SOUND

◆SURROUND          OFF
 TREBLE             0
 BASS               0
 BALANCE            0

CH^:SELECT
◿^:ADJUST  MENU:RETURN
```

FEATURE menu ····· 21

```
FEATURE

◆BLUE BACK         OFF

CH^:SELECT
◿^:ADJUST  MENU:RETURN
```

TIMER menu ····· 23 — 25

```
TIMER

◆OFF ⏲            --:--
 ON  ⏲            --:--
  POSITION
  VOLUME
 ⏲                 --:--

CH^:SELECT
◿^:ADJUST  MENU:RETURN
```

CH-SETTING menu ····· 16

```
CH-SETTING

◆POSITION          CH27
 COLOUR            AUTO
 SOUND             B/G
 SKIP              OFF
 FINE          168.25MHz

CH^:SELECT
◿^:ADJUST  MENU:RETURN
```

NOTE

- If you press MENU/PRESET for more than two seconds, the LANGUAGE mode screen will appear instead of the MENU screen. To display the MENU screen, press MENU/PRESET until the normal screen appears, then press the button again.
- The procedures for setting and selecting the menu items on the following pages are described using the buttons on the remote control. These procedures can also be performed using the corresponding buttons on the TV set.

Settings and adjustments

On-screen display language selection

The on-screen display language can be set to English, Chinese, French, Malay or Arabic.

Behind the door

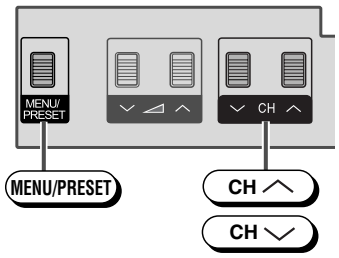

TV set

1 **Press MENU/PRESET for more than two seconds.**

• The language select mode appear.

2 **Press CH ∧ / CH ∨ to select desired language.**

• Pressing MENU/PRESET changes the screen as shown below.



3 **Press MENU/PRESET until normal screen appears.**

Auto channel tuning

Automatically tunes in and presets receivable TV stations.

Behind the door

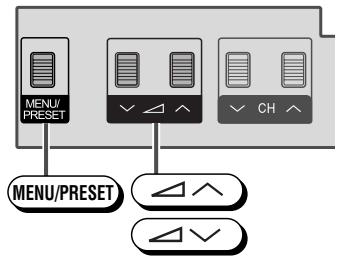

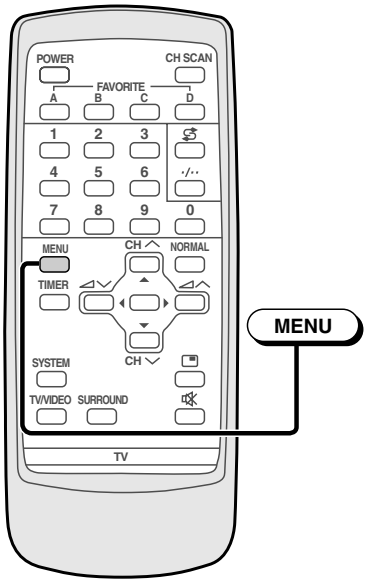

1 **Press (MENU/PRESET) for more than two seconds.**

- The language select mode appear.

2 **Press (MENU/PRESET) again to display AUTO mode screen.**

- Pressing (MENU/PRESET) changes the screen as shown below.

→ Language ⟶ AUTO ⟶ MANUAL
Normal screen ←

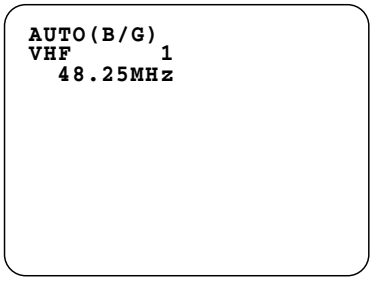

3 **Press (▲) / (▼) on TV set.**

- All the TV stations in your area that can be received by the TV set are automatically preset between channels 1 to 99.
- The screen shows whatever is on channel 1 when auto channel preset is finished.

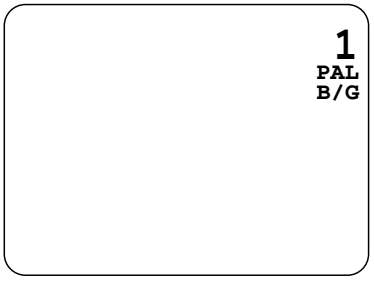

NOTE

- When starting the AUTO PRESET after setting the SOUND SYSTEM with the (MENU), the SOUND SYSTEM for all the channels are stored into memory.
- AUTO PRESET stores all receivable channels including those which may be very weak and not clearly visible. To preset only those channels designated for the local viewing region, use MANUAL PRESET. See 15.
- Unused channels are automatically skipped.

Manual channel tuning

Enables manual channel tuning to a desired TV station.

Behind the door

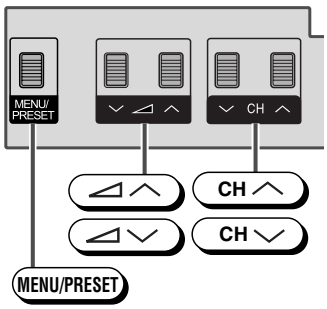

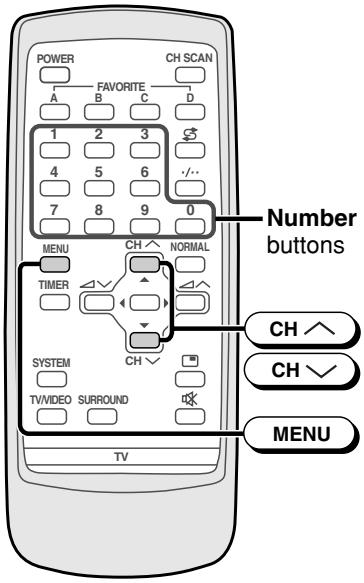

1 **Press (MENU/PRESET) for more than two seconds.**

• The language select mode appear.

2 **Press (MENU/PRESET) twice to display MANUAL mode screen.**

• Pressing (MENU/PRESET) changes the screen as shown below.

→ Language ⟶ AUTO ⟶ MANUAL
Normal screen ←

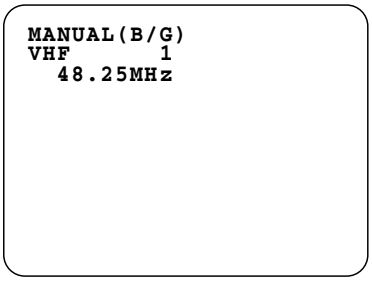

3 **Press (CH ∧) / (CH ∨) or number buttons to select channel position.**

4 **Press (⊿∧) / (⊿∨) on TV set to locate channel you wish to preset to current channel position.**

• Search is initiated and when a TV signal is received during the search, the search stops.

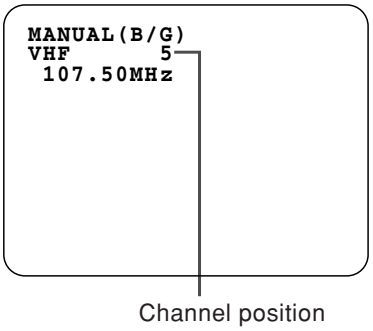

5 **Repeat steps 3 and 4 above, to preset channel positions for other broadcasts.**

6 **Press (MENU/PRESET) again to display normal screen.**

NOTE • SOUND SYSTEM may not have been set correctly, if noise can be heard or if there is no sound. In such case, adjust the SOUND SYSTEM using the (MENU) button on the remote control.

Channel setting

Enables individual channel setting.

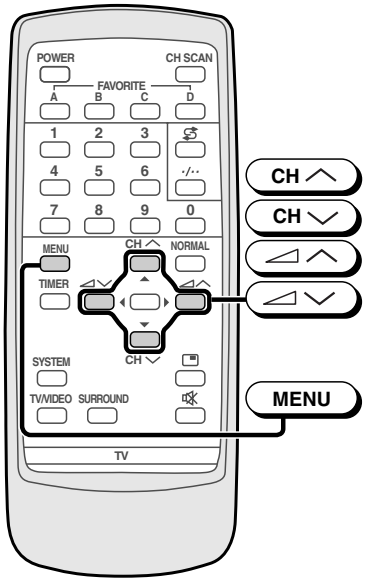

1 **Press MENU to call MENU screen.**

2 **Press CH ∧ / CH ∨ to select "CH-SETTING".**

```
MENU

 PICTURE
 SOUND
 FEATURE
 TIMER
◆CH-SETTING
```

3 **Press ◿∧ / ◿∨ to display CH-SETTING menu.**

4 **Press CH ∧ / CH ∨ to select desired setting.**

5 **Each time you press ◿∧ / ◿∨, setting for individual items changes as follows:**

```
CH-SETTING

◆POSITION        CH27
 COLOUR          AUTO
 SOUND           B/G
 SKIP            OFF
 FINE         168.25MHz


∨CH∧:SELECT
∨◿∧:ADJUST  MENU:RETURN
```

- **POSITION**
  The channel position changes to the higher or lower number.
- **COLOUR**

  AUTO ↔ PAL ↔ SECAM ↔ N358 ↔ N443
- **SOUND**

  B/G ↔ I ↔ D/K ↔ M
- **SKIP**
  ON ↔ OFF
  Channel numbers with a "✚" mark on the left are set to SKIP. To turn off SKIP, press the number buttons to select the desired channel and then set "SKIP" to "OFF".
- **FINE**
  The frequency changes to allow fine tuning.

6 **Press MENU until normal screen appears.**

- When you select AV1, AV2 for the channel position, the CH-SETTING menu changes as shown on the right and the colour mode changes in the following order:

```
CH-SETTING

◆POSITION        AV1
 COLOUR          AUTO


∨CH∧:SELECT
∨◿∧:ADJUST  MENU:RETURN
```

→ AUTO ↔ PAL ↔ SECAM ↔ N443 ↔ N358 ↩

NOTE

- Switching COLOUR system:
  Set the system to "AUTO" for normal TV reception. The AUTO mode automatically detects the receiving signal system and changes the reception system of the TV set. When the picture is not stable, switching to an appropriate system may improve the picture quality.
- In a weak reception area, or under bad reception conditions, you can change the frequency by fine tuning.
- When using FINE, the channel number changes from green to yellow.
- To return the channel to its original frequency setting, follow the manual channel tuning procedure.
  See 15 .

Picture adjustment

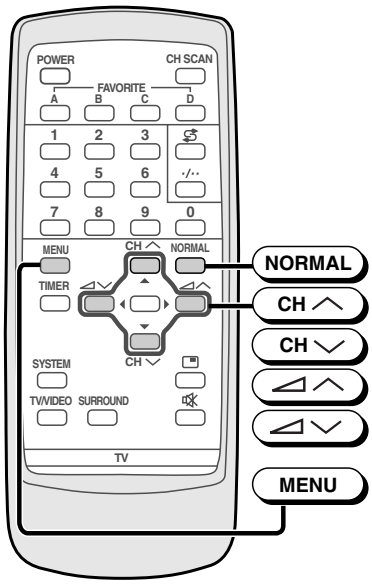

1 **Press MENU to call MENU screen.**

2 **Press CH ∧ / CH ∨ to select "PICTURE".**

```
MENU

◆PICTURE
 SOUND
 FEATURE
 TIMER
 CH-SETTING
```

3 **Press ◿∧ / ◿∨ to display PICTURE menu.**

4 **Press CH ∧ / CH ∨ to select adjustment items.**

```
PICTURE

◆CONTRAST          50
 COLOUR             0
 BRIGHTNESS       +10
 TINT
 SHARPNESS        -10
 WHITE TEMP       ◆ ├──┼──┤ ◇
```

5 **Adjust using ◿∧ / ◿∨.**

- Wait for approximately three seconds to return to PICTURE menu.

```
CONTRAST                50
-  ├──────────────────┤  +
```

6 **Repeat steps 4 and 5 above to adjust other items.**

7 **Press MENU until normal screen appears.**

- Pressing NORMAL while a PICTURE selection is displayed, only the selected mode is reset to the standard (factory-setting) position.
- Pressing NORMAL while a PICTURE menu screen is displayed will reset all the items of PICTURE menu to the standard (factory-setting) position.

The following table lists the adjustment items shown in the PICTURE menu and how they change as you press ◿∧ / ◿∨.

Selected item	Press ◿∨		Press ◿∧
CONTRAST	To decrease contrast	- ├──┼──┤ +	To increase contrast
COLOUR	For less colour intensity	- ├──┼──┤ +	For more colour intensity
BRIGHTNESS	For less brightness	- ├──┼──┤ +	For more brightness
TINT*	To move tint toward red	◆ ├──┼──┤ ◇	To move tint toward green
SHARPNESS	For less sharpness	- ├──┼──┤ +	For more sharpness
WHITE TEMP	To more reddish background	◆ ├──┼──┤ ◇	To more bluish background

*: TINT can only be selected and adjusted when receiving NTSC broadcasts.

Sound adjustment

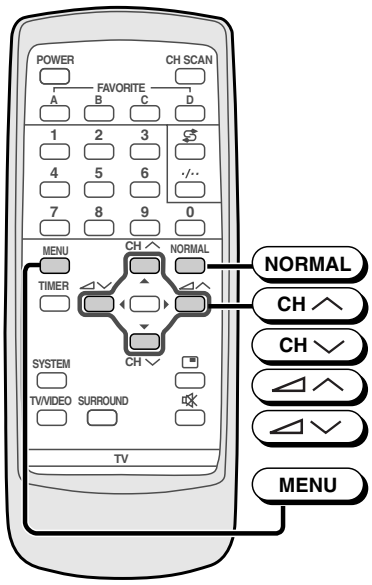

1 Press (MENU) to call MENU screen.

2 Press (CH ∧) / (CH ∨) to select "SOUND".

```
MENU

 PICTURE
◆SOUND
 FEATURE
 TIMER
 CH-SETTING
```

3 Press (◿∧) / (◿∨) to display SOUND menu.

4 Press (CH ∧) / (CH ∨) to select adjustment items.

```
SOUND

 SURROUND        ON Ⅱ
◆TREBLE          +10
 BASS            -20
 BALANCE         ▷20
```

5 Adjust using (◿∧) / (◿∨).

- Wait for approximately three seconds to return to SOUND menu.

```
TREBLE                +10
-  |---------|---------|  +
```

6 Repeat steps 4 and 5 above to adjust other items.

7 Press (MENU) until normal screen appears.

- Pressing (NORMAL) while a SOUND selection is displayed, only the selected mode is reset to the standard (factory-setting) position.
- Pressing (NORMAL) while the SOUND menu screen is displayed will reset all the items of SOUND menu to the standard (factory-setting) position.

The following table lists the adjustment items shown in the SOUND menu and how they change as you press (◿∧) / (◿∨).

Selected item	Press (◿∨)	Press (◿∧)
SURROUND*	ON Ⅰ → ON Ⅱ → OFF	
TREBLE	To decrease treble	To increase treble
BASS	To decrease bass	To increase bass
BALANCE	To shift balance toward left	To shift balance toward right

*: SURROUND mode can be set to "ON Ⅰ", "ON Ⅱ" or "OFF". See 19

Surround sound

Produces a virtual surround sound from the TV's speakers.

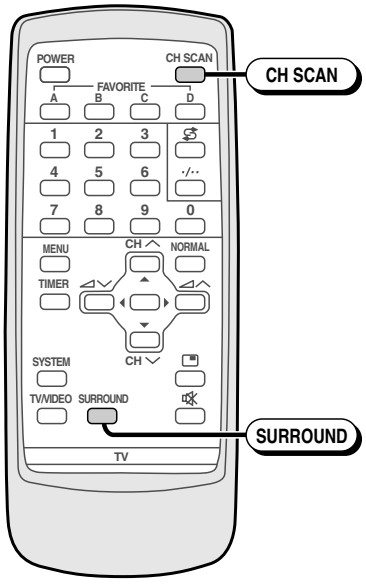

Each time you press (SURROUND), the mode changes between ON Ⅰ, ON Ⅱ and OFF.

OFF: Produces normal sound.
ON Ⅰ : Setting to this mode during stereo signal reception produces a spacious sound, making the most of the speakers' performance.
ON Ⅱ : Setting to this mode during monaural signal reception creates monaural sound that is similar to stereophonic sound.

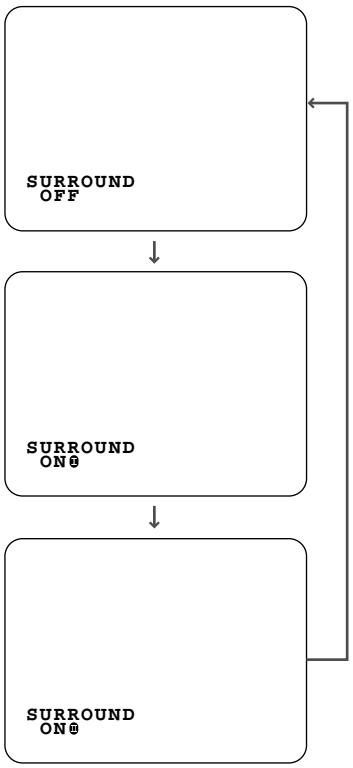

Channel Scan

For fast and easy channel selection, this function displays each tuned channel in numeric order.

1 **Press (CH SCAN).**

2 **Each of the tuned channels is automatically displayed in numeric order, beginning and ending with the current channel. Press (CH SCAN) again to stop CHANNEL SCAN at any time.**

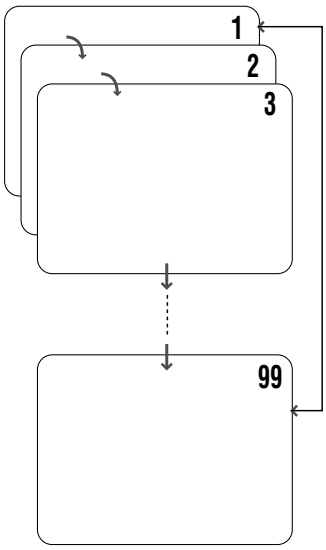

NOTE
- The surround effect can be adjusted using the SOUND menu. See 18.
- Skipped channels are not displayed for Channel Scan.
- Channel Scan does not work when the AV input or DVD mode screen is displayed.

System

Set the system to AUTO for AV Channel reception. The AUTO mode automatically detect the receiving signal system and changes the reception system of the TV set. When the picture not stable, switiching to an appropriate system may improve the picture quality.

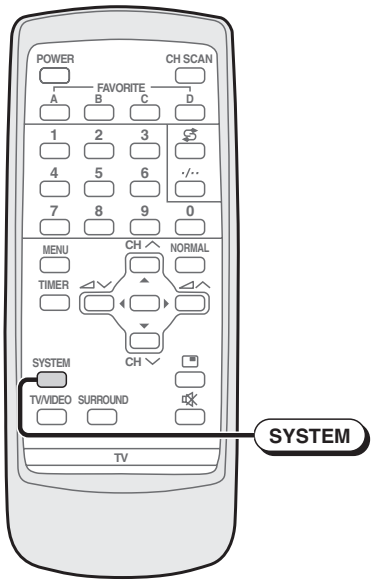

Each time you press (SYSTEM), the mode changes between PAL, SECAM, N443 and N358.

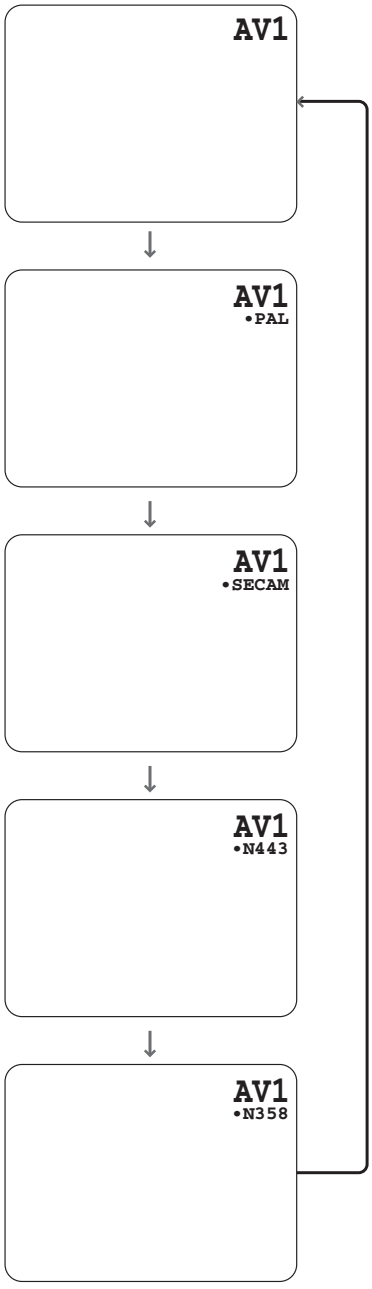

Blue screen

Automatically turns the screen blue if a broadcast signal is not received.

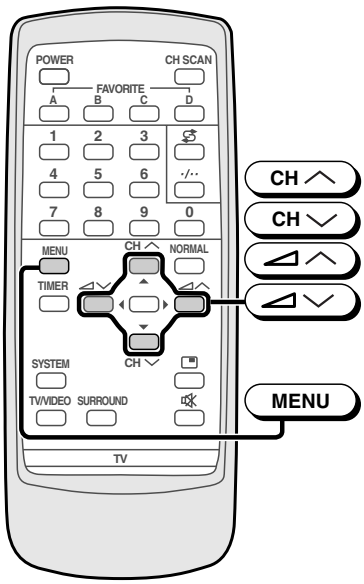

1 Press MENU to call MENU screen.

2 Press CH ∧ / CH ∨ to select “FEATURE ”.

```
MENU

  PICTURE
  SOUND
◆FEATURE
  TIMER
  CH-SETTING


∨CH∧:SELECT
∨◿∧:ENTER    MENU:RETURN
```

3 Press ◿∧ / ◿∨ to display FEATURE menu.

4 Press ◿∧ / ◿∨ to select “BLUE BACK” to “ON” or “OFF”.

```
FEATURE

◆BLUE BACK        ON




∨CH∧:SELECT
∨◿∧:ADJUST   MENU:RETURN
```

5 Press MENU until normal screen appears.

When BLUE BACK is set to “ON”

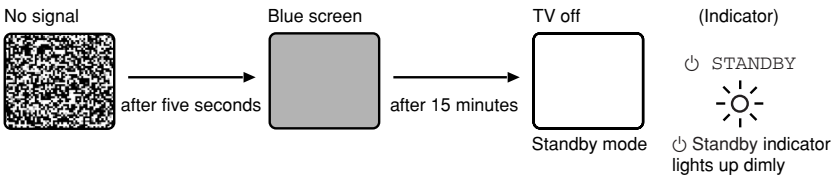

NOTE

- Poor reception due to weak signals and too much noise may activate BLUE BACK, despite the presence of a broadcast signal. To continue watching TV under these conditions, switch “BLUE BACK” to “OFF”.
- When Off timer is set, the OFF TIMER setting has priority over BLUE BACK.

Favourite channels

The colour buttons can be used to select up to four favourite channels.

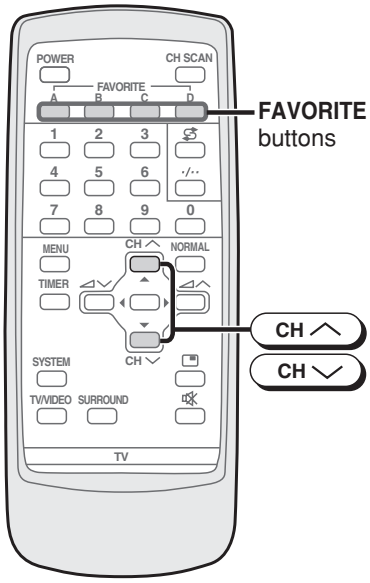

1 **Press CH ∧ / CH ∨ to select your favourite channel. (e.g. Channel 12)**

2 **Press A, for example, until channel number turns white.**

- The display will disappear after three seconds, and then the selected channel is preset.

12
Displayed in green or yellow

3 **To watch favourite channel, press A.**

- The preset favourite channel will be displayed. (e.g. Channel 12)

12
Turns to white

4 **To preset another favourite channel, repeat steps 1 and 2 above.**

- To change a preset favourite channel, repeat steps 1 and 2 above.

12

Off timer

Automatically turns power off after a set length of time has passed.

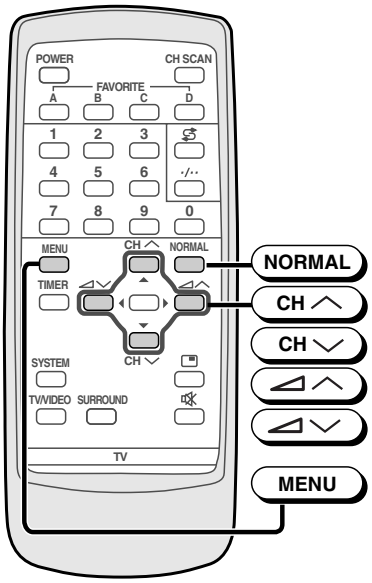

1 Press MENU to call MENU screen.

2 Press CH ∧ / CH ∨ to select "TIMER".

```
MENU

 PICTURE
 SOUND
 FEATURE
◆TIMER
 CH-SETTING
```

3 Press ◿∧ / ◿∨ to display TIMER menu.

4 Press CH ∧ / CH ∨ to select "OFF ⏎".

```
TIMER

◆OFF ⏎              --:--
 ON  ⏎              --:--
  POSITION
  VOLUME
 ⊠                  --:--
```

5 Press ◿∧ / ◿∨ to set time for TV to turn off.

- Maximum time that can be preset is 12 hours and 50 minutes.
- As soon as the time is entered, the timer starts to count down.

```
TIMER

◆OFF ⏎              2:30
 ON  ⏎              --:--
  POSITION
  VOLUME
 ⊠                  --:--


∨CH∧:SELECT
∨◿∧:ADJUST  MENU:RETURN
```

6 Press MENU until normal screen appears.

- Five minutes before the preset length of time expires (in the example, after two hours and 25 minutes), the remaining time appears on the screen.
- A flashing display of the remaining time appears during the last few seconds.
- When the preset length of time has passed, the TV set enters the Standby mode.

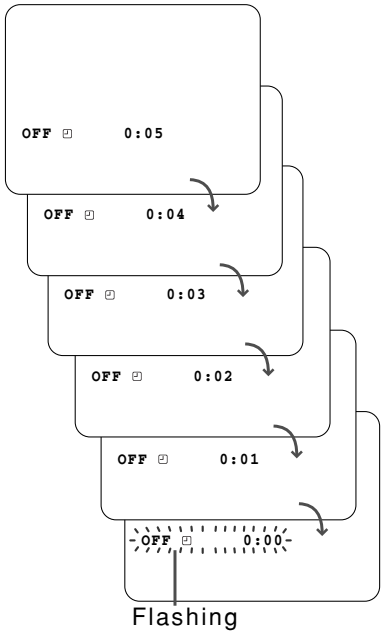

NOTE

- To cancel the timer setting, press NORMAL when "◆" is displayed on the left of "OFF ⏎" so as to set the timer to "- - : - -".
- The timer can be set in ten-minute intervals.
- The Off timer is cancelled if the power is turned off or set to the Standby mode using POWER on the remote control or ⏻POWER on the TV set, or if the power is otherwise interrupted.

On timer

Automatically turns power on after a set length of time has passed.

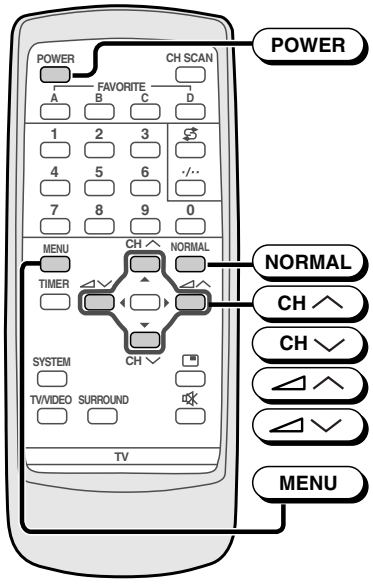

1 Press (MENU) to call MENU screen.

2 Press (CH ^) / (CH v) to select "TIMER ".

```
MENU

 PICTURE
 SOUND
 FEATURE
◆TIMER
 CH-SETTING
```

3 Press (◿^) / (◿v) to display TIMER menu.

4 Press (CH ^) / (CH v) to select "ON ⏎".

```
TIMER

 OFF ⏎          --:--
◆ON  ⏎          --:--
  POSITION
  VOLUME
 ⧖              --:--
```

5 Press (◿^) / (◿v) to set time for TV to turn on.

- Maximum time that can be preset is 12 hours and 50 minutes.
- As soon as the time is entered, the timer starts to count down.

```
TIMER

 OFF ⏎          --:--
◆ON  ⏎           8:00
  POSITION         --
  VOLUME           --
 ⧖              --:--
```

6 Press (CH ^) / (CH v) to select "POSITION".

7 Press (◿^) / (◿v) to set the channel.

```
TIMER

 OFF ⏎          --:--
 ON  ⏎           8:00
◆ POSITION      CH28
  VOLUME           --
 ⧖              --:--
```

8 Press (CH ^) / (CH v) to select "VOLUME".

9 Press (◿^) / (◿v) to set volume.

10 Press (MENU) until normal screen appears.

```
TIMER

 OFF ⏎          --:--
 ON  ⏎           8:00
  POSITION      CH28
◆ VOLUME           20
 ⧖              --:--


vCH^:SELECT
v◿^:ADJUST  MENU:RETURN
```

11 Press (POWER) to put TV set into Standby mode.

- ⏻ Standby indicator will flash to indicate On Timer is set.
- When the preset length of time (in the above example, eight hours) has passed, the power turns on and a picture appears on the screen.
- The ON TIMER speaker volume gradually increases from zero to preset volume.

TV Set

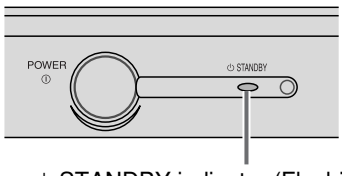

⏻ STANDBY indicator (Flashing)

NOTE

- To cancel the timer setting, press (NORMAL) when "◆" is displayed on the left of "ON ⏎" so as to set the timer to "- - : - -".
- The timer can be set in ten-minute intervals.
- The On Timer is cancelled if the power is turned off using (⏻POWER).
- If the TV set is turned on by the On Timer, then the TV set will be automatically turned off in two hours if no buttons are pressed on the TV set or remote control.

Reminder on-screen timer

Lets you know when a preset length of time has passed by displaying a countdown timer on the screen. This is useful for timer cooking while you watch TV.

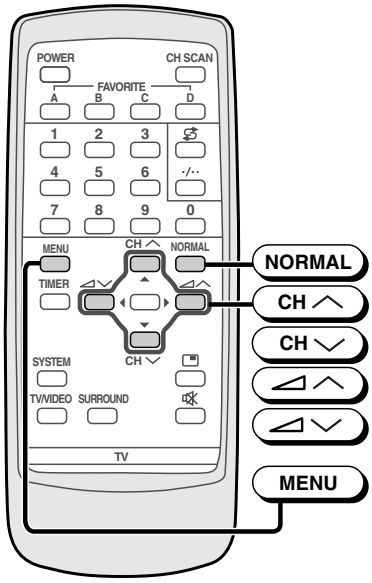

1 Press (MENU) to call MENU screen.

2 Press (CH ∧) / (CH ∨) to select "TIMER ".

```
MENU

 PICTURE
 SOUND
 FEATURE
◆TIMER
 CH-SETTING
```

3 Press (◿∧) / (◿∨) to display TIMER menu.

4 Press (CH ∧) / (CH ∨) to select "⧖".

```
TIMER

 OFF ⏎          --:--
 ON  ⏎          --:--
  POSITION
  VOLUME
◆⧖              --:--
```

5 Press (◿∧) / (◿∨) to set time.

- Maximum time that can be preset is 12 hours and 50 minutes.
- The right example shows that the Reminder will be activated after one hour 50 minutes.

```
TIMER

 OFF ⏎          --:--
 ON  ⏎          --:--
  POSITION
  VOLUME
◆⧖               1:50


∨CH∧:SELECT
∨◿∧:ADJUST  MENU:RETURN
```

6 Press (MENU) until normal screen appears.

- Five minutes before the preset length of time expires (in the example, after one hour and 45 minutes) and each minute thereafter, the remaining time appears on the screen for several seconds.
- When the preset length of time has passed, "⧖ 0:00" flashes in red.

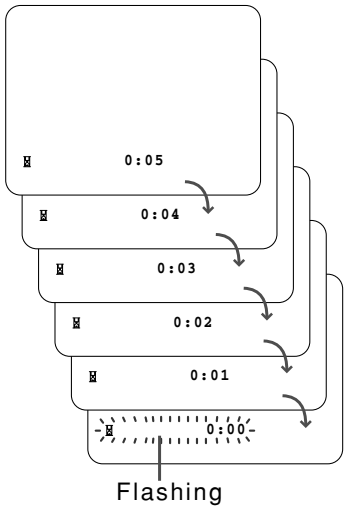

NOTE

- This function also works in the Standby mode. Power is automatically turned on five minutes before the preset length of time expires. The TV set automatically returns to the Standby mode approximately 1 minute if no buttons are pressed on the TV set or remote control.
- The Reminder is cancelled if (⏻POWER) on the TV set is pressed or if the power is otherwise interrupted.
- The timer can be set in ten-minute intervals.
- To cancel the timer setting, press (NORMAL) when "◆" is displayed on the left of "⧖" so as to set the timer to "- - : - -".

Connections

Connecting to a DVD player

The DVD input terminals (COMPONENT-IN) on the rear of the TV can be used to input high-quality images from a DVD player.

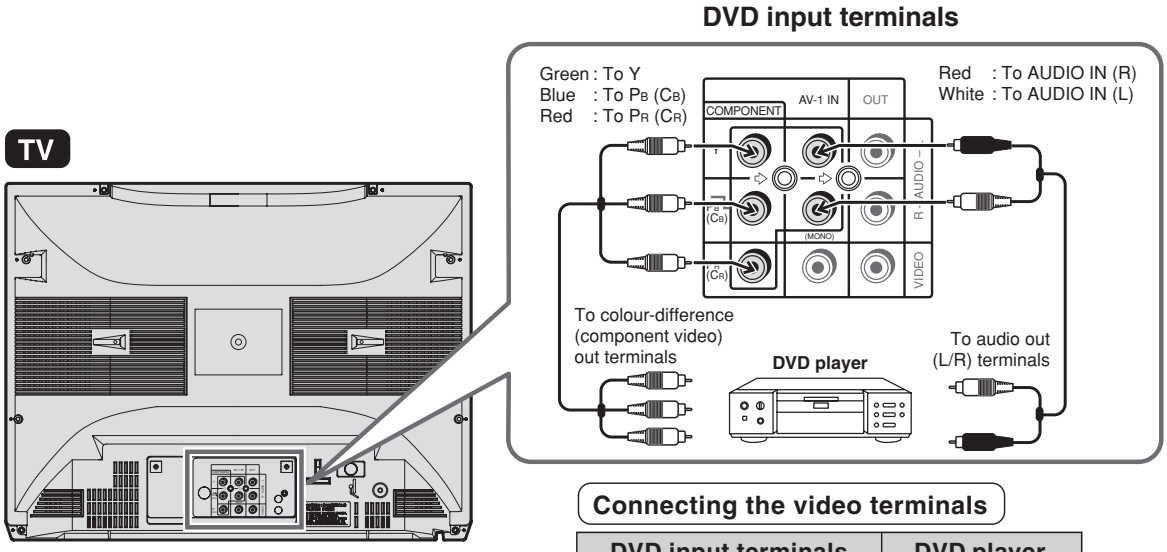

Connecting the video terminals

DVD input terminals		DVD player
COMPONENT-IN VIDEO	Y	Y or Y/Y
	PB(CB)	PB(CB) or B-Y/Pb
	PR(CR)	PR(CR) or R-Y/Pr

Watching DVD Playback

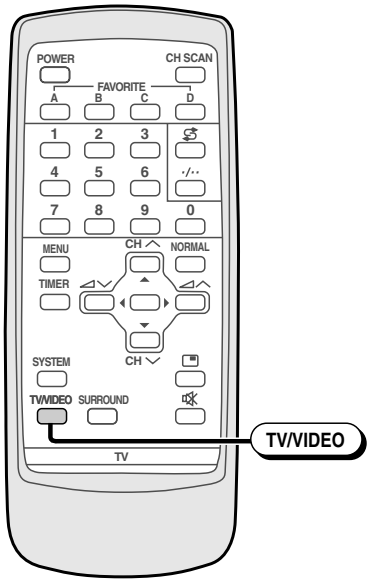

1 **Press (TV/VIDEO) to select "COMPONENT", DVD input screen.**

2 **Turn on the DVD player and begin playback.**

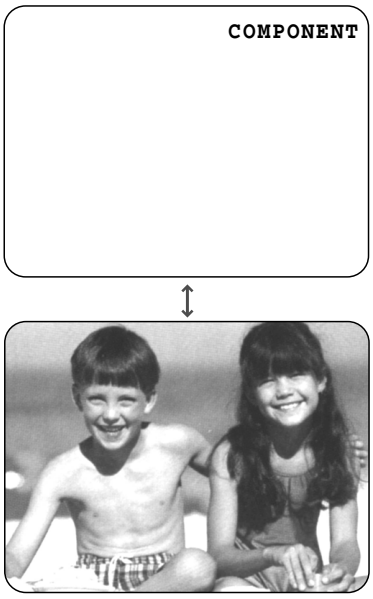

NOTE

- When connecting the TV to a DVD player via the Component-in terminals, the video and audio from the DVD player cannot be output through the Audio/Video out terminals on the TV.
- Please refer to the operation manual of your DVD player for more information.
- Be sure to fully insert the plugs of the connecting cables into the terminals on the TV set and video equipment. Failure to do so may result in noise.
- Before connecting the cables, turn off the power of the TV set and video equipment.
- Always remove the cables from the terminals by the plugs and not the cables themselves.

Connecting to an antenna

To enjoy a clearer picture, use an outdoor antenna. The following is a brief explanation of the types of connections that are used for coaxial and feeder cables.

If your outdoor antenna uses a 75-ohm coaxial cable with a standard DIN45325 plug (IEC 169-2), plug it into the antenna jack at the rear of the set.

If your outdoor antenna uses a 300-ohm twin-lead flat feeder, connect a 300-ohm to 75-ohm impedance converter and plug it into the antenna jack at the rear of the set.

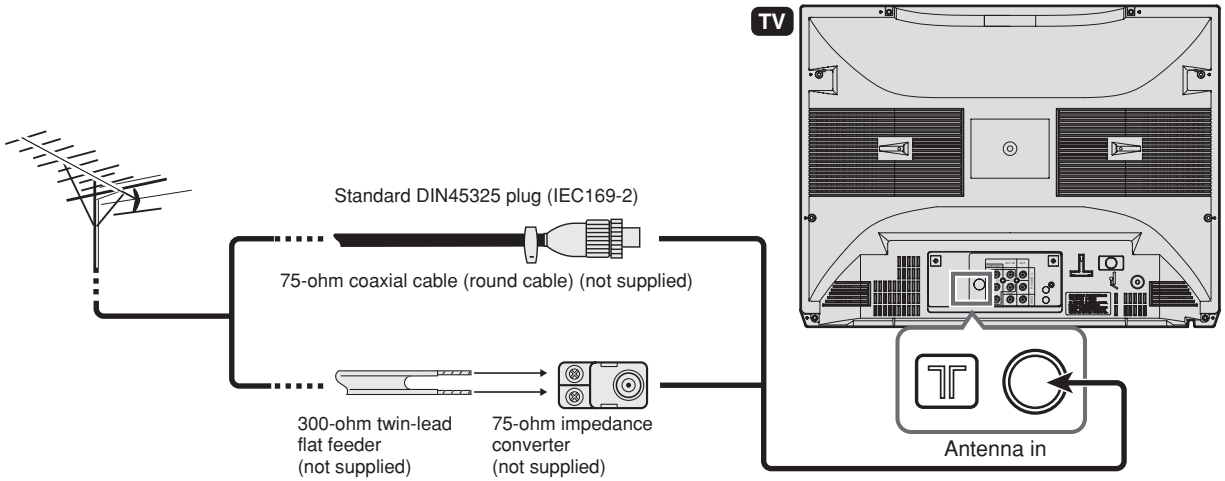
TV
Standard DIN45325 plug (IEC169-2)
75-ohm coaxial cable (round cable) (not supplied)
300-ohm twin-lead flat feeder (not supplied)
75-ohm impedance converter (not supplied)
Antenna in

Connecting to an antenna via a VCR

You can also connect the TV set to the tuner on a VCR using the connection shown below.

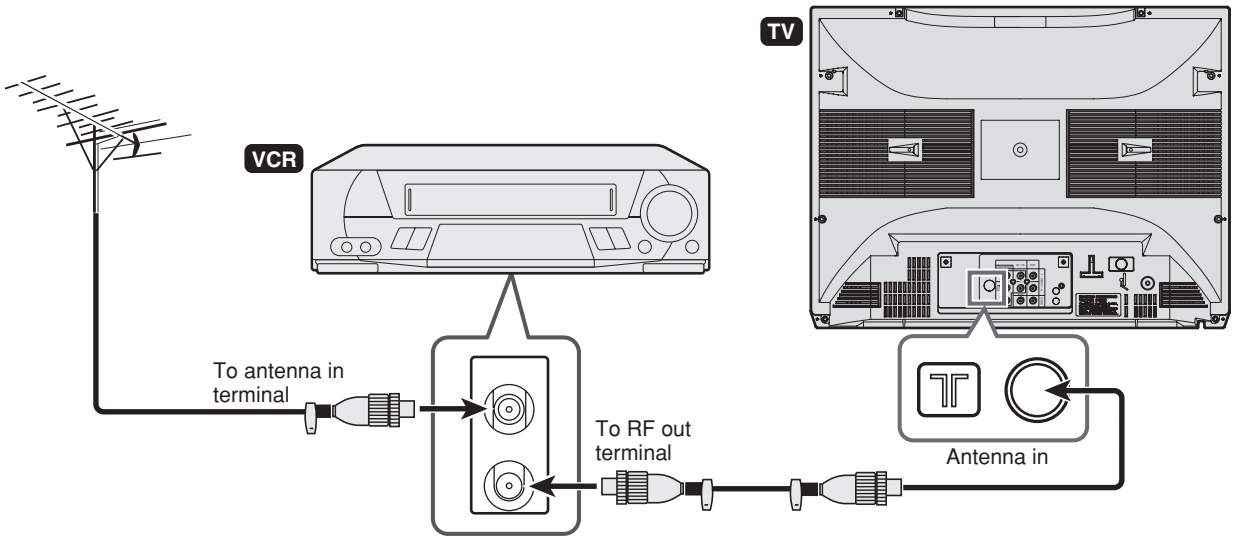

NOTE

- When using the RF terminal connection, set the TV to channel zero to make initial adjustments for the VCR.
- Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
- See the operation manual of your VCR for connection details.

Connecting to video equipment

Enjoy playback from a video disc player, VCR or other video equipment by connecting them to this TV set using the Audio/Video in terminals.

Example use of front terminals

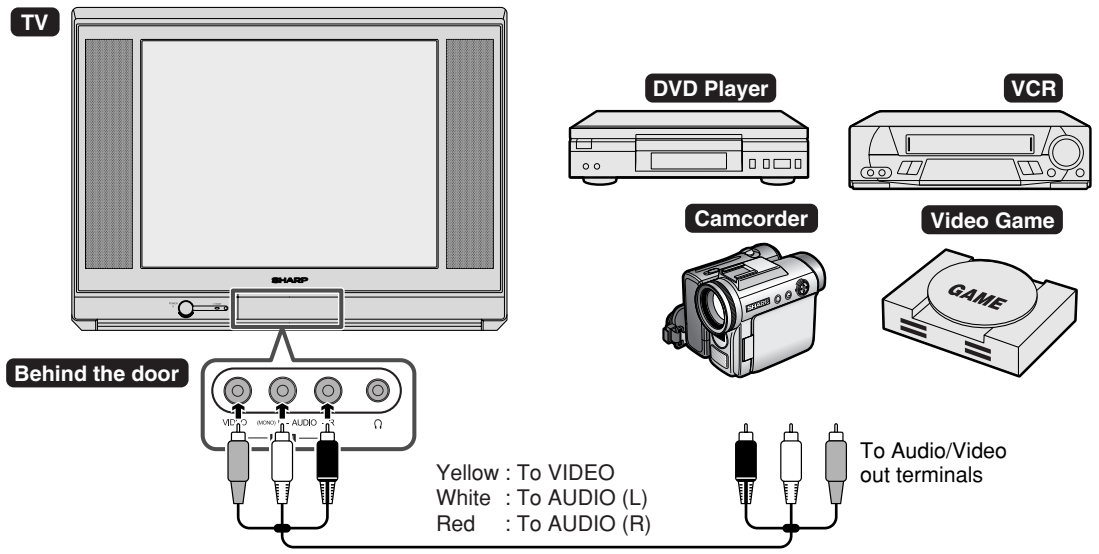

Example use of rear terminals

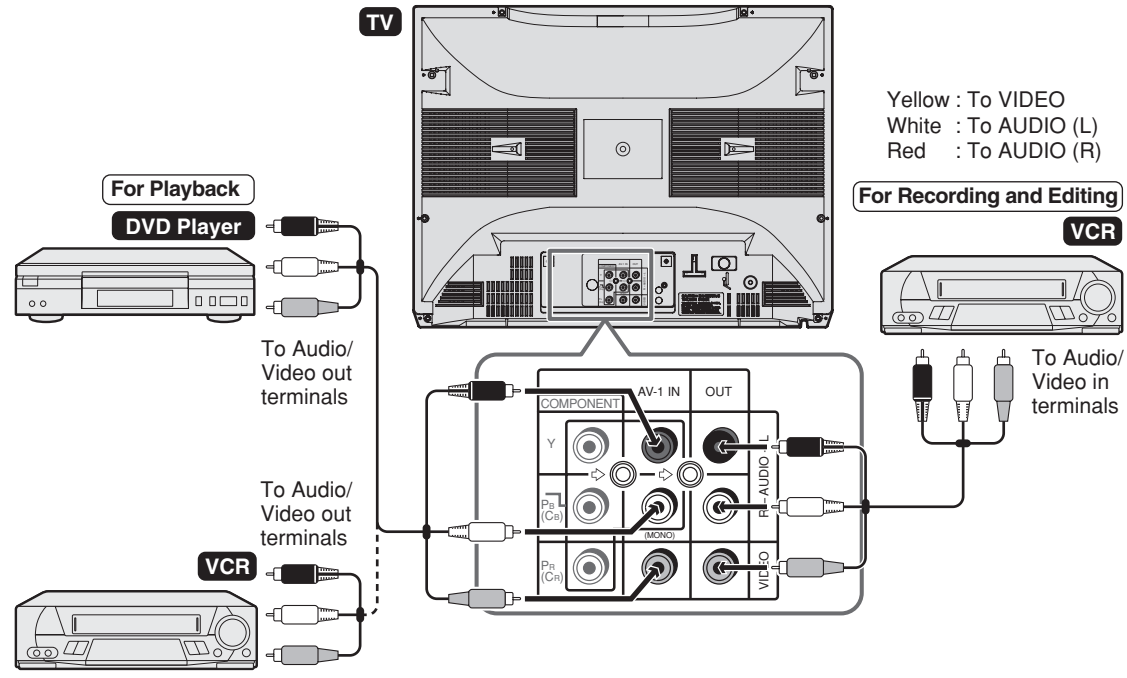

NOTE

- Turn off the power on the TV set and the VCR being connected before making the above connections. Be sure the cord plugs are fully inserted in the connection terminals.
- For playback of monaural audio, connect the external source to the audio input left terminal on the front or rear of the TV set (MONO) to hear the same sound from both speakers.
- The audiovisual cords required to connect the TV set with video equipment may differ from those shown in the above diagram. See the operation manual of your video equipment for connection details.
- The above recording and editing connections are for intended solely for personal use and not for the illegal copying of audiovisual material protected by copyright laws.

Troubleshooting

The following problems do not always indicate a hardware failure. Therefore, please use the troubleshooting guide below before calling for repair service.
If, after following the guide none of the remedies work, unplug the TV set and call for service.

Quick Service Check List / Problems → / Possible Causes/Remedies ↓	Remote control does not work.	Bars on screen	Picture distorted.	Picture rolls vertically.	No colour	Poor reception on some channels	Picture weak.	Picture lines or streaks	Picture ghosting	Picture blurred.	Sound OK, picture poor.	Picture OK, sound poor.	No picture or sound
Try a new channel to check for possible station trouble.			●	●	●	●	●	●	●	●	●	●	●
TV not plugged in. Outlet power OFF.	●												●
⏻ **POWER** switch of TV not ON.	●												●
Antenna not connected to terminal at the back of the TV set.					●	●	●		●		●		●
If outside antenna is used, check for broken wires.		●	●	●	●	●	●	●	●	●	●		●
Check for local interference.		●		●		●		●	●		●	●	
Turn OFF using the ⏻ **POWER** switch, then turn ON again after a minute.	●												●
Adjust COLOUR control.					●		●				●		
Check batteries in the remote control.	●												
Try fine tuning to correct.			●		●		●			●	●		
Contrast setting in picture mode might be all the way to the minus side. Press the **NORMAL** button on the remote control to correct.											●		●
Increase the volume.												●	●

NOTE • This unit is equipped with a microprocessor. Its performance could be adversely affected by external electrical noise or interference. If this should happen, unplug the unit and plug it in again after a few minutes.

Specifications

MODEL			21H-FT1	
Receiving System			World multi 21 system	
	TV Broadcasts/ VCR Playback		PAL-I PAL-B/G PAL-D/K	SECAM-B/G SECAM D/K, K1 NTSC-M (NTSC standard)
	VCR Playback		NTSC 4.43/5.5 MHz/60 Hz NTSC 4.43/6.0 MHz/60 Hz NTSC 4.43/6.5 MHz/60 Hz NTSC 4.43/5.5 MHz/50 Hz NTSC 4.43/6.0 MHz/50 Hz NTSC 4.43/6.5 MHz/50 Hz	NTSC 3.58/5.5 MHz NTSC 3.58/6.0 MHz NTSC 3.58/6.5 MHz SECAM-I (6.0 MHz)
	VCR Playback (Using Video-in terminals)		SECAM-L (French SECAM)	
	Laserdisc Player Playback (Using RF-in terminals)		PAL 5.5 MHz/60 Hz PAL 6.0 MHz/60 Hz PAL 6.5 MHz/60 Hz NTSC 3.58/4.5 MHz/50 Hz	
Reception Channels				
	PAL-B/G SECAM-B/G	VHF	E2–E12 ch	
		UHF	E21–E69 ch	
	PAL-D/K SECAM-D/K, K1	VHF	C1–C12 ch, R1–R12 ch	
		UHF	C13–C57 ch, R21–R69 ch	
	PAL-I	VHF	B–J ch	
		UHF	21–69 ch (Hong Kong)	
	NTSC	VHF	2–13 ch (U.S.), 1–12 ch (Japan)	
		UHF	14–69 ch (U.S.), 13–62 ch (Japan)	
	CATV		S1–S20 ch, S21–S41 ch (Hyper)	
Receiving Frequency			48.25 MHz – 863.25 MHz	
Channel Tuning			100-Channel Electronic Tuner with Full Auto Tuning System	
Picture Tube			21-Inch Flat CRT	
Terminals			Audio/video input × 2 (front × 1, rear × 1) , DVD input (COMPONENT-IN) × 1 (rear) Audio/video output × 1 (rear) , Headphone jack × 1 (front)	
Sound Output			7.5 W (RMS) × 2, total 15 W (RMS)	
Power Source			AC 110 – 240V, 50/60 Hz	
Power Consumption			117 W	
Dimensions			618 (W) × 473 (H) × 482 (D) mm	
Weight			24 kg (Approx.)	

NOTE

- Design and specifications are subject to change without notice.
- Receiving system: These receiving systems, encompassing all currently available technology, include those with planned broadcast, videotape and laserdisc hardware and software.
- Reception channels: Some examples of the main receivable channels are shown above.

SHARP®

SHARP CORPORATION

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages